

VoiceLineSM

Getting Started Guide



SAMSUNG SMT - W6100

IMPORTANT INFORMATION - PLEASE READ

Warning: E911 service may be limited or not available.

- Voice service, including E911 service, DOES NOT function during an electrical power or broadband provider outage.
- If you relocate your phone, you MUST provide your new location. Delays may occur in updating your location.
- E911 service may not be available from all areas. Please contact your service provider.

Warning: E911 service may be limited or not available.

- Voice service, including E911 service, DOES NOT function during an electrical power or broadband provider outage.
- If you relocate your phone, you MUST provide your new location. Delays may occur in updating your location.
- E911 service may not be available from all areas. Please contact your service provider.

These decals contain important information regarding 911 services for your voice services. We request that you place these decals in a visible location on your telephone as a reminder.

IMPORTANT NOTICE CONCERNING EMERGENCY 911 SERVICES

Your service provider, not the manufacturer of the equipment, is responsible for the provision of phone services through this equipment. Any services provided through this equipment are not intended to replace or be a substitute for primary line voice services or Plain Old Telephone Service ("POTS") and are not meant to provide Automatic Number Identification or Automatic Location Information capabilities associated with emergency 911 or E911 services. Check with your service provider to determine whether emergency 911 or E911 services are offered as part of your plan. Even where emergency 911 services are offered as part of your plan, the service will not work properly if you move the equipment to a different location from your registered location. You should also be aware that phone services (including 911) will not work in the event of either a failure of your internet service or in the event of a power outage. You must inform any other persons who may use this equipment of the limitations of 911 and E911 emergency services. It is strongly recommended that you always maintain an alternate means of reaching a 911 operator in case of an emergency. The manufacturer, distributor and service provider shall not be liable for, and expressly disclaim, any direct or indirect damages, claims, losses, expenses, liabilities, actions, risks, or harms arising out of or related to the services provided through this equipment, including without limitation, emergency 911 or E911 services.

The use, disclosure, modification, transfer, or transmittal of this work for any purpose, in any form, or by any means, without the written permission of the copyright holder, is strictly forbidden.

Disclaimer

The content of this manual is subject to change without notice and should not be construed as a commitment by the manufacturer, distributor, or service provider. This manual is furnished for informational use only and the manufacturer, distributor, or service provider assumes no responsibility for any errors or inaccuracies that may appear herein.

My VoiceLine Account Information

Fill in the form below to keep a record of your VoiceLine account information.

VoiceLine Information

VoiceLine Phone Number:

Account Number:

PIN:

VoiceMail Access Number:

Table of Contents

INTRODUCTION	1
PACKAGE CONTENTS	2
SETTING UP THE SAMSUNG SMT-W6100	3
Preparing for Setup	3
Learning the SMT-W6100 Phone Layout	4
Key Description	5
Display	7
Display Layout	7
Icon (Display) Description	8
Dimming Mode	10
Clock Mode	10
Backlight	10
Service Light	11
GETTING STARTED	12
Before You Start	12
Setting Up the Charger	12
Technical Data	12
Installing/Removing/Charging the Battery	13
Installing the Battery	13
Removing the Battery	14

Low Battery Indicator	15
Recharging the Phone.....	15
Preparing the Samsung SMT-W6100 to Make Calls	15
PLACING CALLS	17
Understanding Local Dial Plans.....	17
Making Calls	18
Calling within Your Area Code (Using a U.S. Dial Plan)	18
Calling within North America (Using a U.S. Dial Plan)	18
Calling International Destinations (Using a U.S. Dial Plan)	18
USING VOICEMAIL	20
Recording a Personal Greeting	20
Listening to VoiceMail Messages.....	21
From Your Samsung SMT-W6100	21
From the Web	22
Remotely From any Touch-Tone Phone	23
MANAGING YOUR ACCOUNT AT THE VOICELINE ACCOUNT CENTER ...	25
CUSTOMER SUPPORT	26
TROUBLESHOOTING	27
FAQS	32
VOICELINE CALLING FEATURES	34
END USER WARRANTY	40

Introduction

VoiceLine allows you to use your existing broadband Internet connection and wireless access point to receive calls and make local, long distance, and international calls – all at incredibly low rates.

Instead of relying on the traditional telephone network, VoiceLine securely transmits phone calls over the Internet, at rates much lower than traditional phone companies can offer.

Just follow the simple installation instructions, and when you pick up the phone a few minutes later, it will be ready to make calls! No need to dial an access number or an account number. Just make calls all over the world!

This Guide will walk you through the set-up process and explain everything you need to know to begin using the VoiceLine service.

Package Contents

- ★ 1 Samsung SMT-W6100 Wi-Fi Phone
- ★ 1 5-volt power adapter & cradle-style charger
- ★ 1 CD-ROM with user's guide
- ★ 1 VoiceLine Getting Started Guide

Setting Up the Samsung SMT-W6100

 
This section provides step-by-step instructions for installing the Samsung SMT-W6100.

Preparing for Setup






Before you begin the setup process, you will need to have any 802.11b or wireless access point that is connected to a broadband Internet connection. If encryption is turned on, you will need to know the encryption key that is set on your access point.

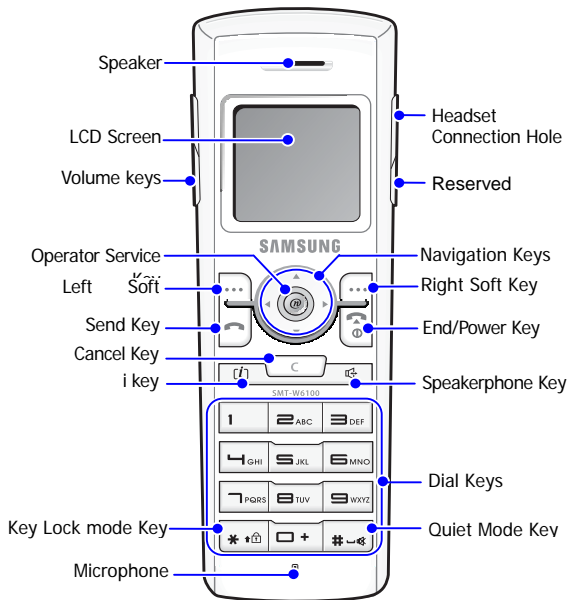





Learning the SMT-W6100 Phone Layout

The following figure shows the main elements of your phone.



Key Description


Key(s)	Description
 <p>Soft keys</p>	<p>Perform the functions indicated by the text above them, on the bottom line of the display.</p>
 <p>Navigation Keys (up/down/left/right)</p>	<p>In Menu Mode: Scroll through the menu options. In Idle Mode: - Left key checks voicemails.</p>
 <p>Browser Home Page key</p>	<p>Press and hold this button to connect to your browser homepage.</p>
 <p>Send key</p>	<p>Makes or answers a call. In Idle Mode, accesses the call log list. In Menu Mode, selects a menu function or stores information that you have entered, such as a name in the phone or SIM memory.</p>
 <p>Cancel/Back/ Correction key</p>	<p>Deletes characters from the display. When pressed and held in Idle Mode, quickly accesses the New memo screen. In Menu Mode, returns to previous menu.</p>

Button	Description
 End key	<p>Ends a call.</p> <p>When pressed and held, switches the phone on or off.</p> <p>In menu Mode, cancels your input and returns to Idle Mode.</p>
 	<p>When pressed and held in Idle Mode, quickly accesses your voice mail server.</p>
 	<p>Enter numbers, letters and some special characters.</p>
 	<p>Used for various purposes in different functions.</p> <p>When pressed and held while entering a phone number, * key insert 'P'(pause. The number before 'P' means the dialing number and the number after 'P' means the DTMF digit after call set-up is completed.</p> <p>When pressed and held in Idle Mode, the # key enters or exits the Quiet Mode and * key enters the Key Lock Mode.</p>
Volume keys	<p>(On the left side of the phone)</p> <p>During a call, adjust the earpiece volume.</p> <p>In Idle Mode, adjust the key tone volume.</p>
 i Key	<p>Converts into Internet-Radio mode.</p>
 Speakerphone Key	<p>Converts into speakerphone mode.</p>

 Display





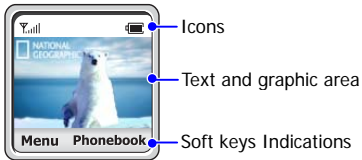




Display Layout







The display has three areas:



Area	Description
First line	Displays various icons. See 'Icon Description' section of this guide.
Middle lines	Display messages, instructions and any information that you enter, such as number to be dialed.
Last line	Shows the functions currently assigned to the two soft keys.

Icon (Display) Description

Icon	Features
	Shows the received signal strength. The more the number of bars, the stronger the signal.
	Appears when a call is in progress.
	Appears when you are out of a service area. When it displays, you cannot make or receive calls.
	Appears when you have new or unchecked voice messages.
	When a message is received.
	Appears when you have new or unchecked multimedia messages.
	Appears when you are retrieving a multimedia message.
	Appears when you set the alarms to ring at a specified time.
	Appears when you set the alert type for incoming calls to Vibration or Vibration then melody.

Icon	Features
	Appears when the Quiet Mode is active.
	Appears when your phone is connected to the Access Point.(You can not make a call yet).
	Appears when the phone is registered to the network. You can make or receive calls.
	Appears in speaker phone mode.
	Appears when your phone is logged in the presence server.
	Shows the level of your battery. The more bars you see, the more power you have left.

Dimming Mode

If you don't press any key in a given period of time which you can set in the Backlight menu option (Menu 6.2.3), the backlight turns to dim to save the power. Press any key to awake the display from the Dimming Mode.

Clock Mode

If you don't press any key in a minute after dimming of the display, the display goes into the Clock Mode to save the power. Press any key to awake the display from the Clock Mode.

 
Backlight

The display and the keypad are illuminated by a backlight. When you press any key, the backlight illuminates. It turns off if you don't press any key within a given period of time, depending on the Backlight menu option.

Service Light

The service light's activity depends on the Service light menu option.

The operation (On/Off) of service light is selectable from the Settings menu (6.4.5).

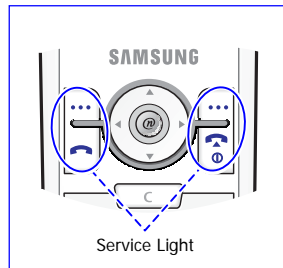

GETTING STARTED

Before You Start

Setting Up the Charger

After having decided where to install the charger:

- Put the adapter's jack into the round plug of the charger.
- Put the adapter in a 100/220 V plug.

Technical Data

The adapter and the charger have the following working values:

Adapter	100/240 VAC, 50/60 Hz	150 mA
	5.0 VDC	700 mA
Charger	5.0 VDC	700 mA

Installing/Removing/Charging the Battery

 
A rechargeable Li-ion battery powers your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.




You must fully charge the battery before using your phone for the first time.
A discharged standard battery is fully recharged in approximately 3.5 hours.

Installing the Battery

1. Put the lower part of your battery, and then install the battery by pressing the upper part.

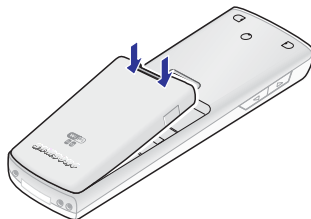


Removing the Battery

1. Switch off the phone by pressing and holding the  key.
2. Press the button and the battery is separated and raised as shown in the figure below.



 3. Lift to remove the battery.

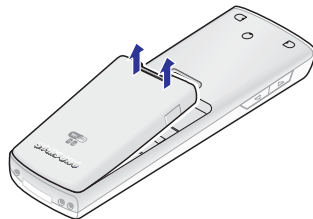

Low Battery Indicator

When the battery is almost discharged and only a few minutes of talk time remain, the battery sensor informs you in the following ways: an empty battery icon flashes (🔋), you hear a warning tone and a message repeats at regular intervals on the display. When the battery becomes too weak for the phone to operate, it switches off automatically.

Recharging the Phone

Place the handset into the charger to recharge your phone's battery.

Preparing the Samsung SMT-W6100 to Make Calls

1. Press and hold the power key until the phone switches on.
The phone searches for, and displays, the available wireless access points.
2. Select the name of the access point you want to which you would like to connect by scrolling to it and pressing **OK**.
3. When the information about the access point is displayed, press **OK**.
If encryption is enabled on the access point, you will be prompted to select the WEP key input type.
4. Select ASCII or HEX and press **OK**.
5. Enter your encryption key and press **OK**.
The phone will now obtain an IP address from the access point and download the configuration files.



After you set up the SMT-W6100 for the first time, it may take up to fifteen (15) minutes for the automatic download of the configuration files to complete. During the download process, the phone's screen may display a progress bar and the phone may reboot more than once. Do not shut the phone off during this process.

When your phone number displays on the screen, the download process is complete, and your phone is ready to make calls.


Placing Calls

Once the SMT-W6100 is set up and the screen displays your phone number, you will be able to place and receive calls.

Understanding Local Dial Plans

Each VoiceLine account is assigned a Dial Plan. This determines the numbering scheme you will dial to make calls. For example, if you have a U.S. Dial Plan, you should dial as though you are in the United States, even if you are in another country.

Making Calls

To make a call, dial using your telephone keypad then press the Send button .

Calling within Your Area Code (Using a U.S. Dial Plan)

Dial a local number that is in the same area code as your Primary VoiceLine telephone number using 7-digit dialing.

Dial **the local 7-digit phone number**.

For example, if your Primary VoiceLine phone number has a 201 area code and the local phone number you would like to call is 201-555-9999, dial **5559999**.

Calling within North America (Using a U.S. Dial Plan)

Dial: **1 + area code + local phone number**.

For example, if the area code is 212 and the local number is 555-8888, dial: **12125558888**.

Calling International Destinations (Using a U.S. Dial Plan)

Dial: **011 + country code + area code + local phone number**.

For example, if the country code is 99, the city code is 77, and the local number is 555-8888, dial:
01199775558888.



Calls outside of the calling plan area are charged a per-minute rate based on the destination you are calling. Please login to your Online Account Center for specific rates.

If you are unable to make calls, please refer to [Troubleshooting](#).

Using VoiceMail

Recording a Personal Greeting

1. Pick up your Samsung SMT-W6100 and press **123** on the telephone keypad, followed by the send key.
You will be connected to the VoiceMail system.
2. Press **2** to administer your mailbox.
3. Press **1** to administer your personal greeting.
4. Press **2** to change your greeting.
You will be prompted to record your greeting.
5. Press **1** to listen to your personal greeting.
6. When you are satisfied with your greeting, press **3** to accept and activate your greeting.
You will hear the message, "Your personal greeting has been activated."



You must accept and activate your personal greeting in order for it to be saved. If you record a greeting and hang up before accepting and activating it, it will not be saved, and the previous greeting will be used.

Listening to VoiceMail Messages

From Your Samsung SMT-W6100

1. From your Samsung SMT-W6100 press **123** on the telephone keypad, followed by the send key.
You will be connected to the VoiceMail system.
2. Press **1** to hear your messages.
The system will announce how many new and saved messages you have in your mailbox. If you have messages, you will hear the date and time each message was left.
3. Follow the prompts to listen to, save, and/or delete your messages.

From the Web

1. Login to your Online Account Center.
2. Click the **VoiceMail** button.
The VoiceMail page displays.
3. Click the **Play** link to hear the desired message.

Listening to VoiceMail Messages (continued)

Remotely From any Touch-Tone Phone

There are two ways to access your VoiceMail messages from a regular touch-tone telephone:

- ★ Dial your VoiceLine phone number using a regular touch-tone phone, and press the star (*) key during the greeting.
- ★ Dial the appropriate access number for your location, and follow the instructions below.

The VoiceMail Access Numbers table below contains a partial list of access numbers. You can view a complete list of access numbers by logging into your Online Account Center.

VOICEMAIL ACCESS NUMBERS		
State	City/Area	Number
California	Los Angeles	213-233-3535
	San Diego	619-819-2828
Florida	Miami	786-866-6464
	Orlando	407-209-3131

VOICEMAIL ACCESS NUMBERS		
State	City/Area	Number
Illinois	Chicago	312-924-0900
New Jersey	Jersey City	201-716-2121
	Newark	973-854-2828
New York	New York	646-432-4444
Pennsylvania	Philadelphia	215-825-7575
	Pittsburgh	412-894-8080

- Using any regular touch-tone telephone, pick up the telephone handset and dial the appropriate VoiceMail access number.
The VoiceMail system greeting plays.
- When prompted, enter your VoiceLine phone number or account number and your PIN.
You will be connected to the VoiceMail system.
- Follow the prompts to listen to, save, and/or delete your messages.
- When you are done listening to your messages, hang up the telephone.

Managing Your Account at the VoiceLine Account Center

VoiceLine offers powerful online tools for managing your account using the VoiceLine Account Center, including call history, personal profile, listening to VoiceMails, managing calling features, and more!

- If you purchased VoiceLine through a local distributor, you can manage your account by logging into the VoiceLine Account Center Web site at <https://www.myaccountcenter.net>.
- If you purchased VoiceLine online, you may login to your account from that Web site. Refer to your welcome email for further information.

To log in, enter your VoiceLine phone number and PIN. If you are using a U.S. VoiceLine phone number to log in, please include a "1" before your number. For example, if your VoiceLine phone number is 222-333-4444, enter 12223334444.

Customer Support

There are several ways that you can contact VoiceLine Customer Support for billing or technical support questions.

- **Via Email:** Refer to your Online Account Center.
- **Via VoiceLine Phone:** Dial 611 from your VoiceLine-connected phone.
- **Via Regular Touch-Tone Phone (within the U.S.):** Call toll-free within the U.S. at 1-800-455-4185.
- **Via Regular Touch-Tone Phone (outside the U.S.):** From anywhere in the world, call 1-801-656-2061.

Troubleshooting

TROUBLESHOOTING – No Service/Network Failure

Symptom: The phone does not ring on incoming calls.

Corrective Action:

- Verify in the Sound Settings that Quiet Mode is turned off.

Symptom: My phone displays "No Service."

Corrective Action:

After you set up the SMT-W6100 for the first time, it may take up to 15 minutes to download the configuration files.

If it has been over 15 minutes since you set up the phone and you still do not have service:

- You may have left the range of your wireless access point. Move closer to the access point to regain the signal.
- Verify that the access point is connected to the internet by connecting to a website from a PC connected to the access point.

TROUBLESHOOTING – No Service/Network Failure

Symptom: When I attempt to make a call, the phone displays “Network Failure.”

Corrective Action:

- You may have left the range of your wireless access point. Move closer to the access point to regain the signal.
- Verify your broadband connection is functioning properly by attempting to connect to a website from a PC on the same access point.

Symptom: I hear a fast busy signal when I try to make a call.

Corrective Action:

- Make sure you are dialing according to the Dial Plan assigned to your account (the Dial Plan was assigned when the account was created). For example, if you have a U.S. Dial Plan, you should dial in the U.S. format:
1 + area code + phone number

NOTE: If the prefix is omitted, the call will not go through.

- Verify your broadband connection is functioning properly by attempting to connect to a website from a PC on the same access point.
- Verify that the phone obtained an IP address by viewing the Network Settings > IP Settings > IP Address menu. If the phone did not obtain and IP address, contact your Internet Service Provider.

Symptom: The phone connection is poor.

Corrective Action:

- Adjust your phone's call quality settings via the Manage Device section of your Online Account Center.
- Move closer to the wireless access point.

FAQs

WHAT IS "BROADBAND"?

A broadband Internet connection is a cable modem, DSL, LAN, T1, T3, LAN, WAN, or any other high-speed "always on" connection. If you have to dial up to an access number to reach the Internet then you do not have broadband. A broadband Internet connection is required to use the VoiceLine service.

DO I NEED A BROADBAND ROUTER?

Yes. You need a wireless access point that is also a broadband router, or that is connected to a broadband router.

CAN I TAKE VOICELINE WITH ME WHEN I TRAVEL?

Yes. Your VoiceLine service travels with you. When someone calls your phone number, your phone simply rings wherever you have your SMT-W6100 connected to a wireless access point -- whether you are home or traveling somewhere else in the world.

CAN I CALL LOCATIONS THAT ARE NOT IN MY CALLING PLAN?

Yes. You can make calls to any location not included in your monthly calling plan. These calls are considered out-of-plan and are charged a per-minute rate based on the country you are calling. Please refer to your Online Account Center.

CAN I MAKE THREE-WAY CALLS ON THE SAMSUNG SMT-W6100?

No. Three-way calling is not a supported feature.

VoiceLine Calling Features

For a complete list of features and codes, refer to the *VoiceLine User's Guide*.

VOICELINE CALLING FEATURES	
Feature	Description
Call Waiting	Once you hear the tone signaling a second call coming into your line, simply press the Send button on your phone. Press Send again to switch back to the first call.
Caller ID	With VoiceLine Caller ID, you will see the phone number of the party who is calling you -- even when you are on the other line.

This table contains the dial codes for some popular Voicemail calling features.

VOICELINE CALLING FEATURE DIAL CODES		
Feature	Action	Dial Code
Call Blocking	SELECTIVE CALL ACCEPTANCE: Receive only calls from telephone numbers on your pre-defined acceptance list.	*64
	Deactivate feature and receive all calls.	*84
	SELECTIVE CALL REJECTION: Block only calls from telephone numbers on your pre-defined rejection list.	*60
	Deactivate feature and receive all calls.	*80
	ANONYMOUS CALL REJECTION: Block all calls whose telephone numbers are hidden due to the caller purposely blocking that information.	*77
	Deactivate feature and receive all calls.	*87

Call Forwarding* (All Calls/ Unconditional)	Send all calls to a pre-defined destination #.	*72
	Send all calls to VoiceMail.	*72123
	Send all calls to a new destination #.	*72 [phone num]
	Deactivate feature & receive all calls.	*73
Call Forwarding* (No Answer)	Send unanswered calls after a certain # of rings to a pre-defined destination #.	*92
	Send unanswered incoming calls to VoiceMail.	*92123
	Send unanswered incoming calls to a new destination #.	*92 [phone num]
	Deactivate feature.	*93

*** When you forward calls, the inbound and outbound calls are priced according to your calling plan.**

VoiceLine Calling Features (continued)

VOICELINE CALLING FEATURE DIAL CODES (continued)		
Feature	Action	Dial Code
Call Forwarding* (Busy)	Send incoming calls when your line is busy to a pre-defined destination #.	*68
	Send incoming calls when your line is busy to VoiceMail.	*68123
	Send incoming calls when your line is busy to a new destination #.	*68 [phone num]
	Deactivate feature.	*88
Call Forwarding* (Service Interruption)	Send incoming calls that experience a network error to a pre-defined destination #.	*74
	Send incoming calls that experience a network error to VoiceMail.	*74123
	Send incoming calls that experience a network error to a new destination #.	*74 [phone num]
	Deactivate feature.	*75

Call Return	Call the last person who called you.	*69
Call Waiting	Deactivate feature so that a single phone call will be uninterrupted by incoming calls.	*70
	Deactivate feature so that all phone calls will be uninterrupted by incoming calls.	*00
Caller ID Delivery	Hide your phone number for all calls.	*95
	Display your phone number for all calls.	*96
	Hide your phone number for a single call.	*67 [phone num]
	Displays your phone number for a single call.	*82 [phone num]
Calling Card	Enable or disable remote outbound calling.	*00
Do Not Disturb	Block incoming calls.	*98
Language Selection	Set the inbound/outbound voice prompt languages.	*94
Redial	Call the last number you dialed.	*66
	Cancel the Redial request.	*86

Speed Dial	Assign a phone number to a speed dial code.	*97
	Dial a number using a speed dial code.	**[code]
VoiceMail	Access the VoiceMail system to record a greeting or hear your messages.	123#

* When you forward calls, the inbound and outbound calls are priced according to your calling plan.

NOTE: After dialing the service code, wait until you hear the confirmation message/options menu before hanging up.

End User Warranty

This product is warranted to be free from manufacturing defects including original parts and workmanship for a period of one year from the date of original purchase. Should you find your unit is not operating properly during the one-year term of this warranty, you should contact your original place of purchase. Please do not contact Samsung directly.

Providing the manufacturing defect is verified along with the date of purchase, and at the manufacturer's discretion, the defective unit will be repaired or replaced with either a new, refurbished, or equivalent model at no charge for up to one year from the date of original purchase.

The end-user should delete all personal account information from the product, as provided in the owner's manual, before returning the product to the distributor for repair or replacement.

This warranty is void if the product is:

- A) Damaged through negligence, abuse, misuse, accident, or acts of God.
- B) Modified or repaired by anyone other than an expressly authorized representative.
- C) Damaged resulting from the improper connection to equipment of other manufacturers.

This warranty does not cover:

- A) Costs incurred in the shipping of the product to and from the original place of purchase.
- B) Damage or improper operation caused by the failure to follow the operating instructions provided with this product.
- C) Routine adjustments to the product, which can be performed by the end-user as outlined in the owner's manual.
- D) Communication problems caused by external factors such as insufficient bandwidth or arising from the Internet service used by the end-user.

THIS WARRANTY IS NON-TRANSFERRABLE AND APPLIES SOLELY TO THE ORIGINAL END-USER AND DOES NOT EXTEND TO SUBSEQUENT END-USERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF THE ORIGINAL PURCHASE, AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED SHALL APPLY TO THE PRODUCT THEREAFTER. THERE IS NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE. ALL SERVICES PROVIDED WITH THE PRODUCT ARE PROVIDED "AS IS."

THE EXTENT OF LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AT THE SOLE DISCRETION OF THE MANUFACTURER. IN NO EVENT SHALL ANY LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER. UNDER NO CIRCUMSTANCES SHALL THERE BE LIABILITY FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, FORESEEN, UNFORESEEN, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

The Samsung logo, consisting of the word "SAMSUNG" in white capital letters inside a blue oval shape.

SAMSUNG

The VoiceLine logo, featuring the word "VoiceLine" in a bold, white, sans-serif font. The "V" is stylized with a horizontal line extending to the left.

VoiceLine™
Getting Started Guide